


# SIMPLE USER GUIDE FOR ISATPHONE PRO

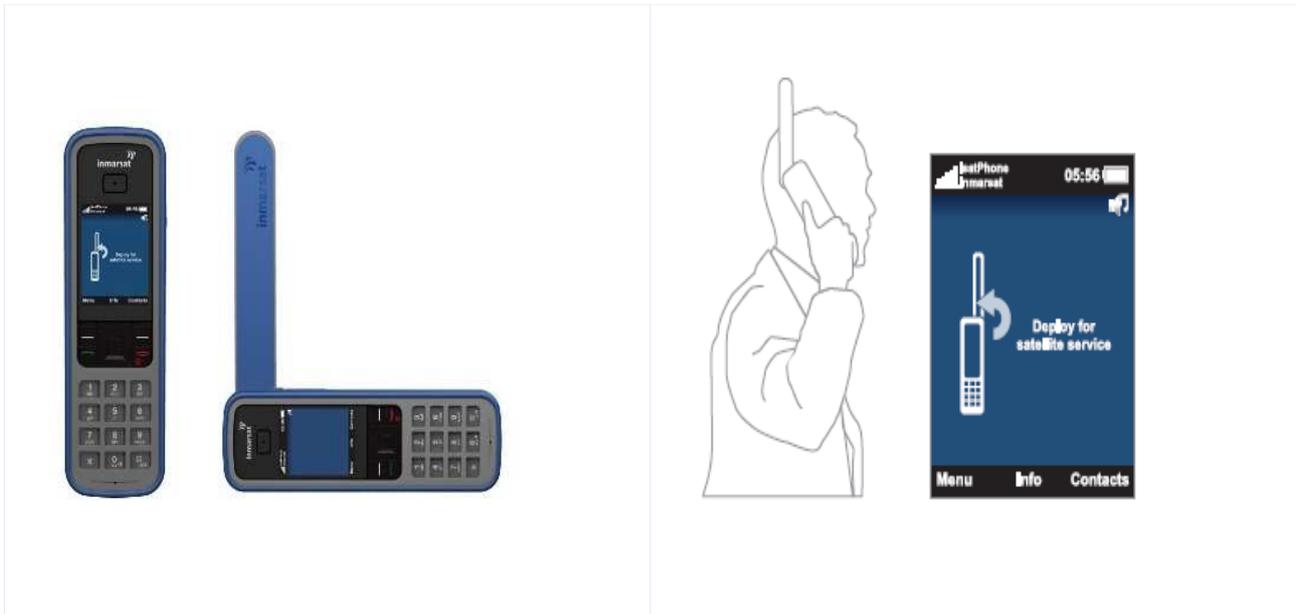

## Getting Signal

1. Stand in an open area with good, unblocked view to the East direction
2. Deploy the satellite antenna and turn on the satellite phone
3. Check the signal indicator. More bars = good reception
4. Once "Inmarsat" appears next the signal indicator, phone is ready (typically 30-60 seconds)

## To Make A Call

Call to fixed line (home or office line) : 00 603 XXXXXXXXX (Selangor)  
00 609 XXXXXXXXX (Kelantan/Pahang)  
00 6088 XXXXXXXXX (Kota Kinabalu)

Call to Mobile number:  
00 6019 XXXXXXXX (celcom)  
00 6012 XXXXXXXX (maxis)  
00 6016 XXXXXXXX (digi)

## To Call the Satellite Phone

Using a Telekom Line with IDD, dial 00 followed by the satellite number  
Using a GSM Phone with IDD, dial 00 followed by the satellite number  
(Please note calls that routed to VoIP service like i-talk or redtone may be barred)  
Example: 00 87077 XXXXXXXX or + 87077 XXXXXXXX  
(Please note the satellite phone must be in service (connected to the satellite network) for the call to get through.)

## To Check Airtime Balance & Expiry

Dial \*106# (you will soon receive a message with the requested information)